blade levels are unequal. Check this level by selecting a point on the ceiling above the tip of one of the blades. Measure from a point on the center of each blade to the point on the ceiling. Measure this distance as shown in Figure 16. Rotate the fan until the next blade is positioned for measurement. Repeat for each blade. Measurement deviations should within 1/8". Run the fan for 10 minutes.

3. Use the enclosed Blade Balancing Kit if the blade wobble is still noticeable.

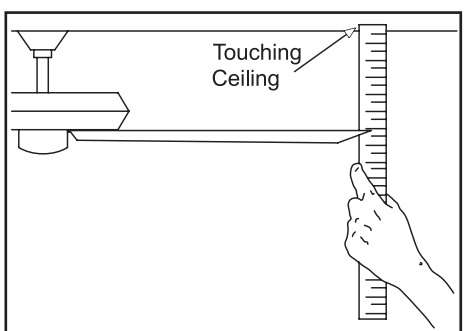

Figure 16

Light Kit Option

CAUTION - To reduce the risk of electrical shock, disconnect the electrical supply circuit to the fan before installing light kit.

FAN WITH LIGHT KIT (Figure 17)

1. Remove the three mounting screws on the black bracket below the motor.
2. Remove the the finial, lower cap, hex nut and rubber washer from the light fixture.
3. Remove the nut and washer from the top of the light fixture.
4. Attach the light kit to the switch housing by first removing the decorative cover on the bottom of the switch housing. Insert the wires from the top of the light kit through the hole in the bottom of the switch housing. Thread the light kit into the hole on the bottom of the switch housing. Secure with the nut and washer provided.
5. Connect the wires from the light kit to the blue and white wires in the switch housing marked for light kit connection. See page 6 for wiring.
6. Connect the wires exiting the bottom of the motor with the switch housing by connecting the molded adaptor plugs together.
7. Slide the switch housing and secure it to the black bracket using the three screws that were removed in step1.
8. With power off, install candelabra E12 base bulbs (Max. 60W, included) to the lamp sockets.

WARNING

OVER LAMPING THE FAN WILL RESULT IN THE FAN LIGHTS SHUTTING DOWN UNTIL THE PROPER WATTAGE OF BULBS ARE INSTALLED. RESET THE LIGHTS BY TURNING OFF, REPLACE BULBS WITH THE POWER ON.

9. Place the glass bowl over the threaded stem of the light fixture and up against the upper cap.
10. Place the decorative leaves, rubber washer, hex nut and cap over the threaded stem of the light fixture, direct the fan pull chain through the side hole on the glass.
11. Place the finial over the threaded stem and direct the light pull chain through the hole of the finial, tighten the finial securely.
12. Attach the pull chain extensions provided to the light pull chain and the fan pull chain.

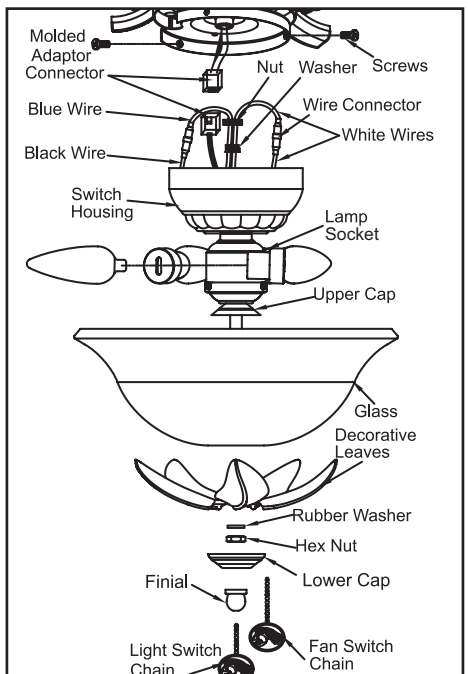

Figure 17